

Company	Printer Model	Interface
BROTHER	IntelliFax 2820 MFP	USB
BROTHER	MFC 210C MFP	USB
BROTHER	MFC 4800 MFP	USB/Parallel
BROTHER	MFC 4800J MFP	USB/Parallel
BROTHER	MFC 6800 MFP	USB/Parallel
BROTHER	MFC 7220 MFP	USB/Parallel
BROTHER	MFC 7420 MFP	USB/Parallel
BROTHER	MFC 7820N MFP	USB/Parallel
BROTHER	MFC 8440 MFP	USB/Parallel
BROTHER	MFC 8840 MFP	USB/Parallel
BROTHER	MFC 8840D MFP	USB/Parallel
CANON	PIXMA MP110	USB
CANON	PIXMA MP130	USB
CANON	PIXUS MP770	USB
CANON	BJF9000	USB
CANON	i2355	USB
CANON	i255	USB
CANON	i320	USB
CANON	i355	USB
CANON	i450	USB
CANON	i455	USB
CANON	i470D	USB
CANON	i475D	USB
CANON	i550	USB
CANON	i560	USB
CANON	i6100	USB/Parallel
CANON	i6500	USB/Parallel
CANON	i850	USB
CANON	i865	USB
CANON	i905D	USB
CANON	i9100	USB
CANON	i950	USB
CANON	i9950	USB
CANON	IX4000	USB
CANON	IX5000	USB
CANON	PIXMA ip1000	USB
CANON	PIXMA ip2000	USB
CANON	PIXMA ip3000	USB
CANON	PIXMA ip4000	USB/Parallel
CANON	PIXMA ip4200	USB

CANON	PIXMA ip5000	USB
CANON	PIXMA ip6000D	USB
CANON	PIXMA ip8500	USB
CANON	S200SPx	USB
CANON	S200SRx	USB
DOCUJET	1610F	USB/Parallel
DOCUJET	UA1610	USB/Parallel
EPSON	Stylus CX-1500	USB
EPSON	Stylus CX-3500	USB
EPSON	Stylus CX-4900	USB
EPSON	Stylus Photo RX510	USB
EPSON	Aculaser C1900	USB/Parallel
EPSON	C750	USB/Parallel
EPSON	EPL-5700	USB/Parallel
EPSON	EPL-5800	USB/Parallel
EPSON	EPL-5900	USB/Parallel
EPSON	EPL-6100	USB/Parallel
EPSON	EPL-6200	USB/Parallel
EPSON	LP-8900	USB
EPSON	Stylus C20	USB
EPSON	Stylus C20SX	USB
EPSON	Stylus C40	USB
EPSON	Stylus C41UX	USB
EPSON	Stylus C43UX	USB
EPSON	Stylus C45	USB
EPSON	Stylus C60	USB/Parallel
EPSON	Stylus C63	USB/Parallel
EPSON	Stylus C67	USB/Parallel
EPSON	Stylus C83	USB/Parallel
EPSON	Stylus Color 1160	USB/Parallel
EPSON	Stylus Color 1520	USB/Parallel
EPSON	Stylus Color 1520K	USB/Parallel
EPSON	Stylus Color 670	USB/Parallel
EPSON	Stylus Color 800	USB/Parallel
EPSON	Stylus Color 810	USB/Parallel
EPSON	Stylus Color 850	USB/Parallel
EPSON	Stylus Color 900	USB
EPSON	Stylus Color PRO 7600	USB/Parallel
EPSON	Stylus Photo 1270	USB/Parallel
EPSON	Stylus Photo 2100	USB/Parallel
EPSON	Stylus Photo 710	USB

EPSON	Stylus Photo 720	USB
EPSON	Stylus Photo 790	USB
EPSON	Stylus Photo 810	USB/Parallel
EPSON	Stylus Photo 830U	USB
EPSON	Stylus Photo 900	USB/Parallel
EPSON	Stylus Photo 915	USB
EPSON	Stylus Photo EX2	USB/Parallel
EPSON	Stylus Photo EX3	USB/Parallel
EPSON	Stylus Photo R1800	USB/Parallel
EPSON	Stylus Photo R210	USB
EPSON	Stylus Photo R230	USB
EPSON	Stylus Photo R2400	USB/Parallel
EPSON	Stylus Photo R250	USB
EPSON	Stylus Photo R310	USB
EPSON	Stylus Photo R350	USB
EPSON	Stylus PM-700C	USB
EPSON	TM-T88III	USB/Parallel
HP	Color Laserjet 2840	USB
HP	LaserJet 3015	USB/Parallel
HP	LaserJet 3030	USB/Parallel
HP	LaserJet 3050	USB
HP	LaserJet 3200	USB/Parallel
HP	LaserJet 3300	USB/Parallel
HP	LaserJet 3330	USB/Parallel
HP	LaserJet 3380	USB
HP	LaserJet M1005 MFP	USB
HP	OfficeJet 4110	USB
HP	OfficeJet 4255	USB
HP	OfficeJet 5510	USB
HP	OfficeJet 6210	USB
HP	OfficeJet 6610	USB
HP	OfficeJet 7210	USB
HP	Photosmart 2610	USB
HP	Photosmart 7150	USB
HP	Photosmart 7550	USB
HP	Photosmart 7660	USB
HP	Photosmart 7830	USB
HP	Photosmart C3180	USB
HP	Photosmart D5160	USB
HP	Photosmart D7160	USB
HP	PSC 1350	USB

HP	PSC 1410	USB
HP	PSC 1610	USB
HP	PSC 2210	USB
HP	PSC 2310	USB
HP	Color Laserjet 2605	USB/Parallel
HP	Color Laserjet 3700	USB/Parallel
HP	Deskjet 450C	USB/Parallel
HP	Deskjet 920C	USB/Parallel
HP	Deskjet 948C	USB/Parallel
HP	DeskJet 970CXI	USB/Parallel
HP	Business Inkjet 1000	USB
HP	DesignJet 100	USB/Parallel
HP	DeskJet 1125C	USB/Parallel
HP	Deskjet 1180C	USB/Parallel
HP	DeskJet 1220C	USB/Parallel
HP	DeskJet 1280	USB/Parallel
HP	DeskJet 3325	USB
HP	DeskJet 3420	USB
HP	DeskJet 3535	USB
HP	DeskJet 3650	USB
HP	DeskJet 3743	USB
HP	Deskjet 3748	USB
HP	DeskJet 3820	USB/Parallel
HP	Deskjet 3920	USB
HP	Deskjet 3940	USB
HP	DeskJet 500C	USB
HP	DeskJet 5440	USB
HP	DeskJet 5550	USB/Parallel
HP	DeskJet 5652	USB/Parallel
HP	DeskJet 810C	USB/Parallel
HP	DeskJet 830C	USB/Parallel
HP	DeskJet 845C	USB
HP	DeskJet 9300	USB/Parallel
HP	DeskJet 930C	USB/Parallel
HP	DeskJet 9600	USB/Parallel
HP	DeskJet 9650	USB/Parallel
HP	DeskJet 9800	USB/Parallel
HP	LaserJet 1022	USB
HP	LaserJet 1160	USB/Parallel
HP	LaserJet 1200	USB/Parallel
HP	LaserJet 1220	USB/Parallel

HP	LaserJet 1300	USB/Parallel
HP	LaserJet 1320	USB/Parallel
HP	LaserJet 2200	USB/Parallel
HP	LaserJet 2200D	USB/Parallel
HP	LaserJet 2300	USB/Parallel
HP	LaserJet 2410	USB/Parallel
HP	LaserJet 2420	USB/Parallel
HP	LaserJet 2500	USB/Parallel
HP	LaserJet 2550	USB/Parallel
HP	LaserJet 4250	USB/Parallel
HP	LaserJet 4300	USB/Parallel
HP	LaserJet 4650	USB/Parallel
HP	LaserJet 5000	USB/Parallel
HP	LaserJet 5000LE	USB/Parallel
HP	OfficeJet K850	USB/Parallel
HP	OfficeJet PRO K550	USB
HP	Photosmart D7160	USB
HP	Color LaserJet 1600	USB
HP	LaserJet 1010	USB
IBM	Infoprint 1116	USB/Parallel
IBM	Infoprint 1316	USB/Parallel
IBM	Infoprint 1332	USB/Parallel
IBM	Infoprint 1412	USB/Parallel
KONICA MINOLTA	PagePro 1380MF	USB
KONICA MINOLTA	MagiColor 2400	USB
KONICA MINOLTA	MagiColor 2450	USB/Parallel
KONICA MINOLTA	MagiColor 5450	USB/Parallel
KONICA MINOLTA	MagiColor 7300	USB
KONICA MINOLTA	PagePro 1300W	USB/Parallel
KONICA MINOLTA	PagePro 1350W	USB/Parallel
KONICA MINOLTA	PagePro 9100	USB
KYOCERA	FS-1010	USB/Parallel
KYOCERA	FS-1010KX	USB
KYOCERA	FS-1020D	USB/Parallel
KYOCERA	FS-1920	USB/Parallel
KYOCERA	FS-6020	USB/Parallel
KYOCERA	FS-820	USB/Parallel
KYOCERA	FS-920	USB/Parallel
KYOCERA	KM-1635	USB
LEXMARK	E230	USB
LEXMARK	E322	USB/Parallel

LEXMARK	T420	USB/Parallel
LEXMARK	T620	USB/Parallel
LEXMARK	W812	USB/Parallel
LEXMARK	Z42	USB
LEXMARK	Z43	USB/Parallel
LEXMARK	Z45	USB
LEXMARK	Z515	USB
LEXMARK	Z55	USB/Parallel
LEXMARK	Z705	USB
OKI	B4350	USB/Parallel
SAMSUNG	SCX-4016	USB/Parallel
SAMSUNG	SCX-4100	USB/Parallel
SAMSUNG	CLP-500	USB/Parallel
SAMSUNG	CLP-510	USB/Parallel
SAMSUNG	ML-1250	USB/Parallel
SAMSUNG	ML-1520	USB
SAMSUNG	ML-1710	USB
SAMSUNG	ML-1750	USB/Parallel
SAMSUNG	ML-2250	USB/Parallel
SAMSUNG	ML-2550	USB/Parallel
SHARP	AR-M160	USB/Parallel
XEROX	DocuPrint 240A	USB/Parallel
XEROX	Able 3321	USB
XEROX	Phaser 3310	USB/Parallel